

R E M O C K L O C K E Y

Have you ever experienced any inconvenience because of the door lock installed outside homes?

Did you have any difficulty in installing the door lock due to the drilling work that can cause damage to your doors?



REMOCK LOCKEY

REMOCK LOCKEY

Inside Door-Lock

Meet a Door-Lock REMOCK LOCKEY that's different...



Convenient installation

- ▶ Tape adhesion method enables easy installation by anyone
- ▶ No extra construction work including drill work is necessary for installation thus preventing damage to the door
- ▶ Easy adhesion and take-off enables convenient use at any types of door
- ▶ Can be reused when moving. (Can be used for various different purposes including porch at houses and inner sliding door at mansions, houses, and warehouses)

One-touch operation with remote control

- ▶ Can use LOCKEY at multiple spots by using a single remote control
- ▶ Easy to use with clear division of open/close
- ▶ Can be used by all family members by registering 16 different remote controls
- ▶ Can be used safely by inputting 260 million different codes

Battery exchange alarm function

- ▶ When remaining battery level drops low, LED lights up to inform that a change is needed
- ▶ When the battery level drops below certain level, close function stops to maximize device stability

Product specifications



- ▶ Method : ASK SINGLE CONVERSION
- ▶ Reception frequency : 315MHz (±500KHz)
- ▶ Operation temperature : -20°C~ 60°C (condition without freezing and dew condensation)
- ▶ Operation humidity : 5%~80% (condition without dew condensation)

How to use product



- Slide open battery cover from the main body in (▼) direction and put in 2 AA sized alkaline batteries
- Firmly close battery cover at the main body
- After installing device, always check whether the remote control is functioning properly with a person at the inside part of the door (Check respectively at both sides of the door)
 - ▶ Transmission distance from the remote control
 - ▶ Best location for frequency transmission and receipt
 - ▶ Adjust direction of the antenna (Best location will be 90° from the main body but this may differ according to the environment)
 - ▶ Alarm tone will ring from the main body when locked or open

● Lock. Open dial tone of product

- ▶ Lock button → single touch → "beep--" → main body locks up
- ▶ Open button → single touch → "beep, beep, beep" → open main body


! Alarm to inform time to change the battery

- ▶ When the LED starts flickering every four seconds and there is a cricket sound from the main body, the battery must be changed to a new one immediately

! Manual lever

- ▶ Manual lever is designed to open easy when pressed with a hand. It is safe for use in emergency situations such as fire

Register and deleting remote control in main body

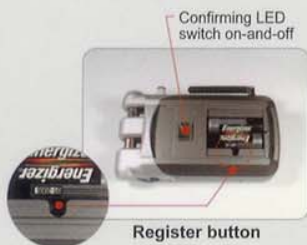

Register remote control

● How to register

1. Open battery cover
2. Register button is located at the left center of the battery holder
3. Keep pressing the register button for 2 seconds using a with a thin device
4. LED will start flickering with a beeping tone
5. Press all 4 remote controls for a second until they make a beeping tone
6. Press the register button again for a second until they make a beeping tone
7. Registration completed. Check whether the main body is operating properly.

● How to delete

1. Gather all remote controls that can be used when the remote control is lost
2. Register again with the above method
3. Registration for the lost remote control is deleted and thus safe to use



How to install and disassemble



● Installation

1. Take off adhesive tape from latch
2. Leave adhesive tape to main body and closely adhere key to the door pillar
3. Detach adhesive tape from the main body
4. Firmly attach main body in designated location
5. After deconstructing the bond, remove assistance bushing.
6. Firmly push adhered part to remove air in order to enhance adhesiveness between main body and the key.

● Confirming product installation

- ▶ Test operation with a remote control whether it is accurately installed
- ▶ Let alone for 24-hours in order to enhance adhesive power of the adhesive tape

● How to disassemble

1. Separate bolt on each sides of the base plate from the main body by using a cross screwdriver.
2. Cut off base plate adhering to the door slowly, pushing forward in a downward move, using fine but tough metal wire.
(It uses same method for the latch.)
3. Adhesive tape on the door can be taken off by blowing with a hair dryer.





Certification

Industrial property rights registration

2004. 11. 29 Door lock device (New device registration no. 0369717)

2005. 02. 14 Wireless electronic lock device (Program registration 2005-01-219-000784)

2005. 06. 21 [REMOCK] (Trademark registration no. 0622017)

2005. 07. 05 Door lock device (Patent registration no. 0497596)

2005. 08. 10 Electronic door lock device (New device registration no. 393165)

Industrial property rights application

2005. 02. 18 Remote controlled door lock device (Patent application 10-2005-0013375)

2005. 09. 26 Front door padlock (Design application 30-2005-0035889)

2005. 10. 25 Door lock stopper (Utility application 20-2005-0030262)

2005. 10. 25 Front lock padlock (Design application 30-2005-0032445)

Status of certification

2005. 04. 25 Venture capital company confirmation
(Gyeonggi Regional Office Small & Medium Business Administration)

2005. 07 Gyeonggi online trading frontier company (Gyeonggi governor)

2005. 09. 22 ISO 14001:2004 certification
(Korea International Standards Certification Authority)

2005. 10. 27 ISO 9001:2000 certification (VNZ)

Awards

2005. 04. 30 Good venture capitalist award
(Gyeonggi Regional Office Small & Medium Business Administration)
